

## PRINCETON ADAPTATION TO EXISTING MOFFETT MOUNT

Kit Number: P90.798



FIG. 1

If required, weld the stub shafts (PN:P10.1079B) in the location shown. Ensure continuous and proper welding of this item.

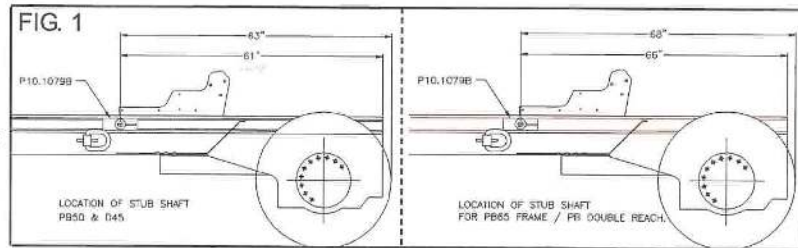


FIG. 2

Place the 6" x 6" reinforcement angle (PN: P90.334A) onto the back of the bed. Mark and cut out opens for the Moffett pin mounts to clear.

Weld the angle to the bed of the transport vehicle. Ensure good weld contact between the Moffett pin mounts and the angle.

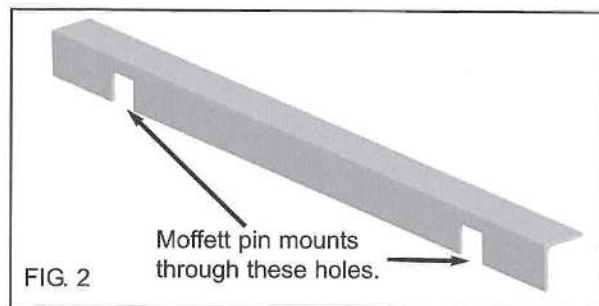


FIG. 3

Locate the bottom plate extension (PN: P90.740B) as shown. Weld the plate in place.

This is same as  
for PB series  
machines



FIG. 3



FIG. 4

When using the D Series, you must install the removeable tire pad extension (PN: P90.741C) onto the existing top pad.

Ensure the spring loaded pin is locked in place.



Mount the D Series unit following the same instructions as you would the Moffett unit.



FIG. 4

## **Parts number/description/quantities needed for kit.**

- 1) P10.1079B/Moffett pin weldment/qty.(2)
- 2) P90.1069B/Bed strengthener/qty.(2)
- 3) P90.740B/Extension plate/qty.(2)
- 4) P90.741C/Curved tire pad extension/qty.(2)
- 5) 606-111/Transport stabilizer chain Moffett style (44" o.a.l.)/qty.(2)
- 6) 444-131/Lynch pin 7/16"/qty.(2)
- 7) 415-107/1" Hitch pin w/Lanyard & hair pin/qty.(2)
- 8) 604-125/Safety sign, pinch point/qty.(2)
- 9) 604-127/Decal, Piggy-Back transport/qty(1)
- 10) 604-143/Safety sign warning/qty.(1)
- 11) 604-152/Safety sign warning mounting/qty.(1)

This is the complete B.O.M. for kit P90.798